



1. Driver applies the parking brake.




4. Driver places a cone in front of the trailer.



2. Driver chocks one of the trailer wheels.



5. Driver informs the supervisor at the terminal that the trailer is in position and ready for loading/unloading.

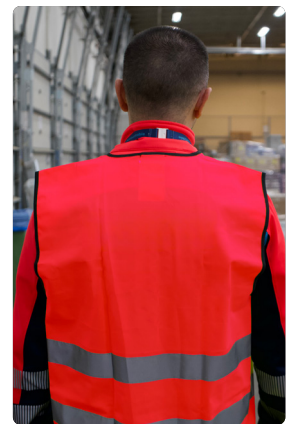

3. Driver disconnects the trailer.



6. Terminal worker secures the trailer to the dock with straps.



Departure

Instructions to ensure
avoidance of accidents



1. Prohibited to connect the trailer before loading/unloading has been completed.



2. Terminal worker removes the straps and closes the door to the dock.




3. Supervisor at the terminal informs the driver that the trailer is ready for departure.




4. The driver prepares the trailer for departure by:



Removing the cone.
Cone and chocks
are put in their
designated places.

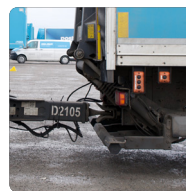


Connecting
the trailer.

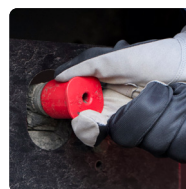

Releasing the
parking brake.



Removing
the chock.

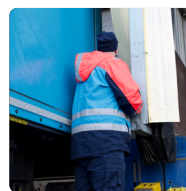

Checking that the dock
door has been closed
and the weather seal
removed.

postnord

Instructions

Instructions to ensure
avoidance of accidents



postnord